

Air Blaster – Quick Guide



BEFORE HARVESTING

When picking up header and connecting PTO

For hydraulic and harness, you can place the shorter pipes as you want on feeder house / header. Short pipes are magnetized, which makes them easy to move.

Follow instructions.



Lift pipes from feeder house.



Move to position you want.



Example of placement





BEFORE OR WHILE HARVESTING

Decide if you want to operate system manual or in auto mode.

By pushing the red button, you activate the system manual, and by pushing the second contact you put the system into auto mode.

In auto mode system will operate frequently (1 min, 30 Seconds).



System in auto mode