


HOW TO USE

SMART TOP LINK

Even spread pattern in every pass


MODES

OFF

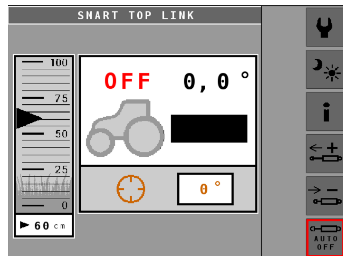

When you want to start using Smart Top Link, Press “AUTO OFF” button to activate the system.

PAUSE

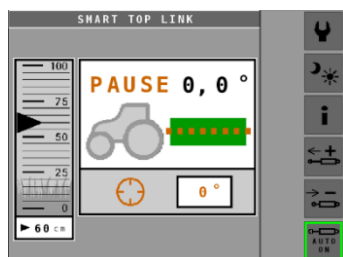


Tractor is not moving, or speed is over 25km/h.

Adjust the tractor speed and the system will switch to “AUTO”.


If this doesn't work, in some special cases the sensor data is not reliable enough for automatic control.

AUTO

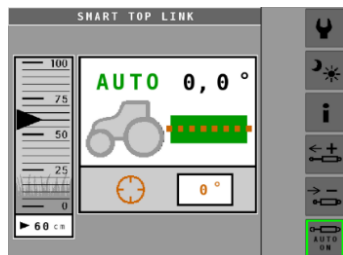

Top link moves automatically to keep the implement levelled.

Note that once tractor starts moving, the top link will start properly moving after 20 seconds, even with “AUTO”.

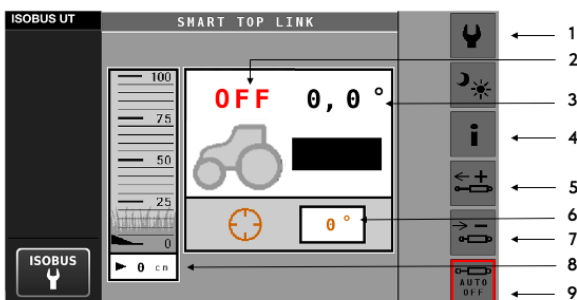

1. Settings menu
2. System status (OFF/PAUSE/AUTO)
3. Current angle of implement
4. Help view
5. Manually extend top link
6. Target angle
7. Manually shorten top link
8. Current height of implement
9. AUTO ON/OFF to activate and deactivate Smart Top Link

QUICK ANGLE FIX

If the top link should fix the angle quickly (for example after refill), it is recommended to lower the tractor hitch (by at least 3% in hitch height) for filling. After lifting it back up, the Smart Top Link system will detect the refill and correct the spreader angle quicker afterwards.

HEIGHT ADJUSTMENT

You can also observe the height of the implement.

The correct height for the implement is often mentioned in the implement manual.

On transport, the Smart Top Link should be turned off for safety reasons.

Use the system only in field conditions (under 25 km/h), system must be OFF, when working around the implement.

