

FQC: Software Update Guide

1 Download the software

1. On your laptop or PC with Internet connection, visit: <https://access.agcocorp.com/en/products/fqc.html>
2. Navigate to **SOFTWARE UPDATES**. Here you will find the latest software available and how to check if you have the latest version already. If you do, there is no need to update.
3. If you don't, press on:
Download FQC Software
FQC's software will automatically start downloading to your "Downloads" folder.
4. Once downloaded, you will find it under the name: **fqc-x.x.swu** (x.x = version number, e.g. 1.0, 1.1).

2 Transfer software to USB stick

1. Connect your USB stick and open its folder.
2. On a separate window, open your "Downloads" folder.
3. Make sure both windows are visible side by side.
4. Drag **fqc-x.x.swu** from "Downloads" to the USB window.
5. A progress bar will show the transfer progress.
6. Once done, close all windows and eject the USB stick safely.

Eject USB Safely


3 Start up FQC

1. On your Fendt Katana, start up FQC on your FQC Terminal as you normally do.
2. Once the application is running, connect the USB that contains the **fqc-x.x.swu** file.

4 Selecting FQC

1. After a few seconds, the FQC Terminal will display a screen where you will be asked to select an application to install.
2. Press on the **"FQC Camera System"** button to start FQC's update installation.

Note: If by accident you press on "Other application" don't panic. You can always go back to this screen.

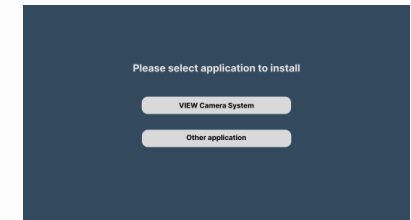

5 Installing FQC

Once you click "FQC Camera System," the installation will begin. A progress bar at the bottom of the screen will show the installation progress.



Warning
Do not turn off the FQC Terminal until the installation is complete!

6 Waiting until completion

Once the progress bar at the bottom of the screen reaches 100%, the FQC Terminal screen will turn black. Even though it looks like the terminal is off, it is not! Wait patiently until the FQC application starts.

Warning
Do not turn off the FQC Terminal until the installation is complete!

7 Installation completed

If the FQC application starts normally, congratulations! You have successfully updated FQC on your FQC Terminal. **Note:** Remember to unplug the USB stick.



Learn more about FQC:

access.agcocorp.com/en/products/fqc.html

